 





Disney

 
43191



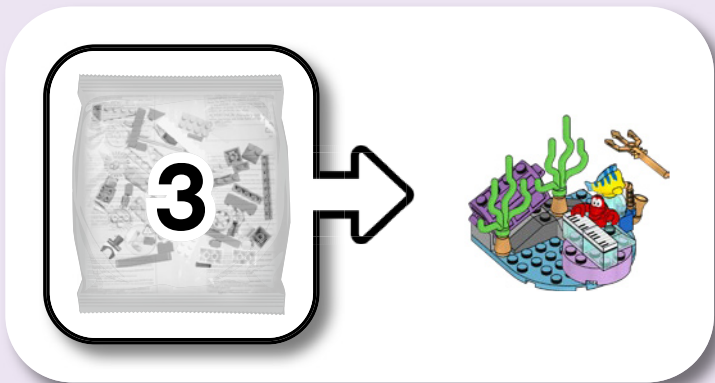


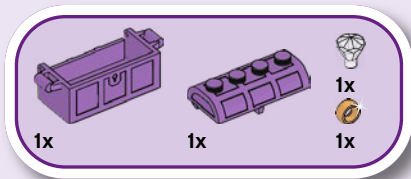


1


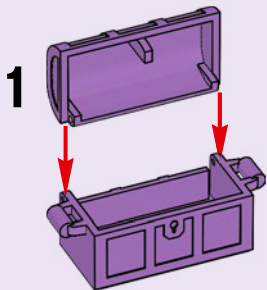 


2

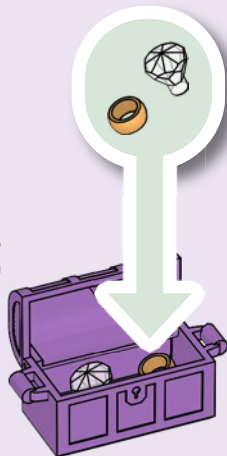 


3

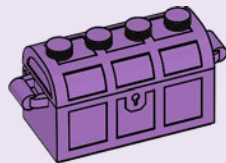 

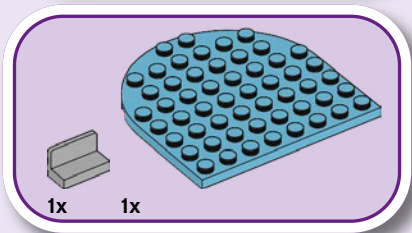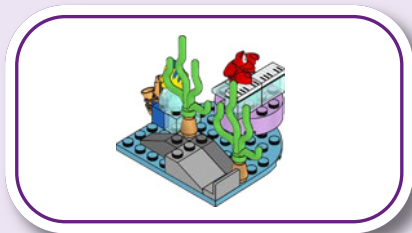  


1

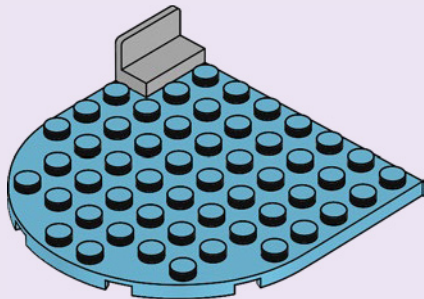 


4




  2

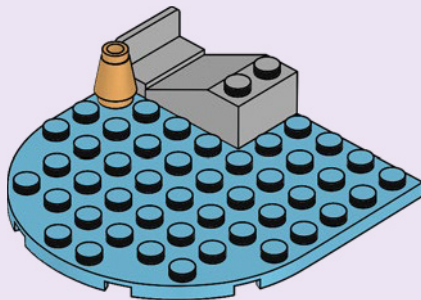

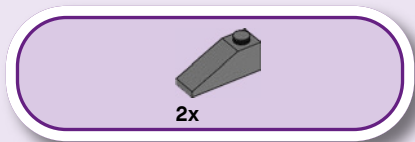

3

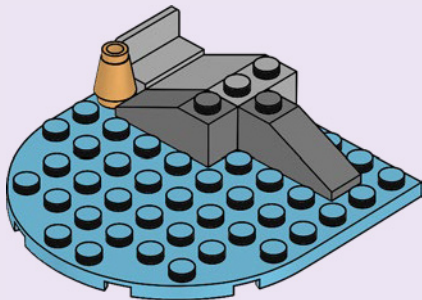 


6



1x

 4

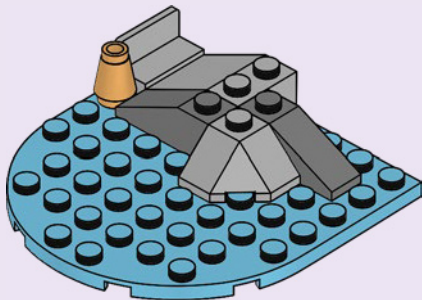




1x



1x

 5

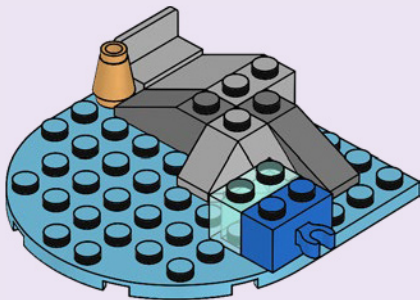

8

 


1x



1x

6

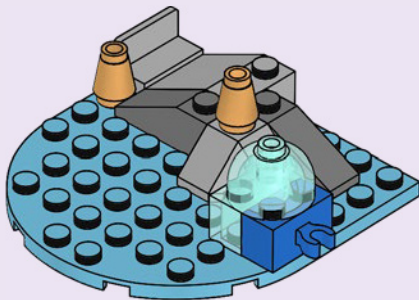



1x



1x

7

 





1x

8



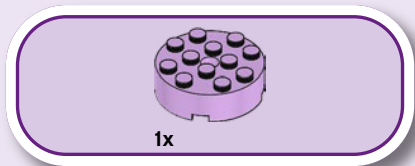


9

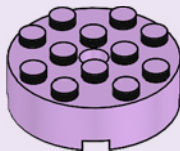 



1x

 
10

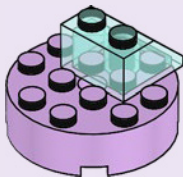



2x

 11

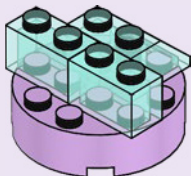


14



2x

 12

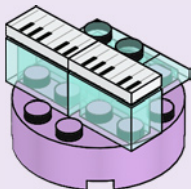



1x

13




  14

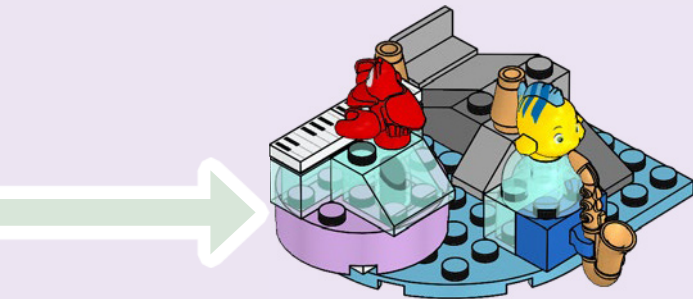

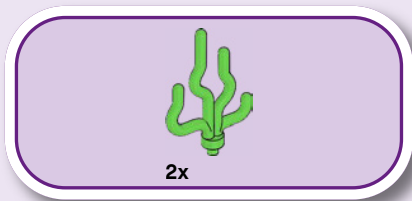


15

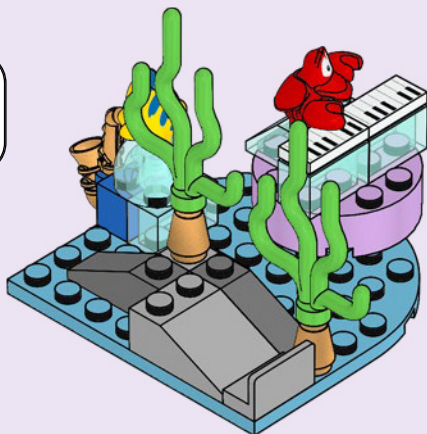 



1x

 16

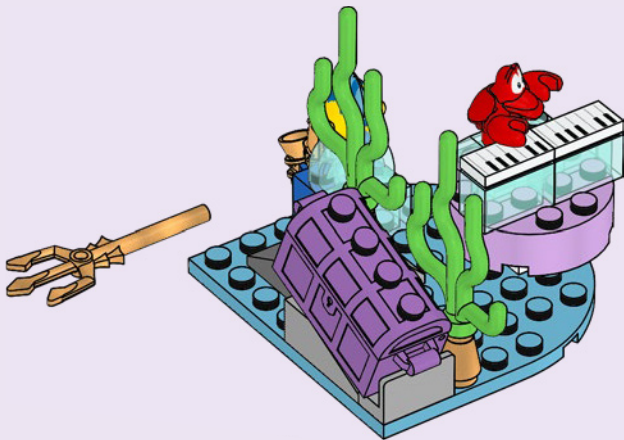

18



1x
4600294



2x
6210272



1x
6332638



2x
6293665



1x
370001



1x
6332664



2x
6313138



4x
4249112



1x
4234525



 
1x
6335114



1x
6332634



2x
6092203



1x
6249584



2x
6166107



1x
6247798



1x
6055639



1x
6335309



1x
6294227



2x
4213568



1x
4159739



4x
4550323



2x
6269992



1x
6055640



1x
6056851



1x
6274729



1x
6264989



 
3x
6244910




1x
6244885




1x
6248206




1x
416201

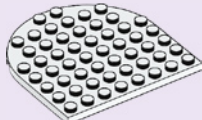 

1x
6249095

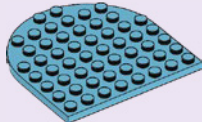 

2x
6296050

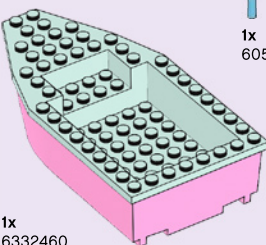 

1x
6332460



1x
6226644



1x
6300588



2x
6102537



1x
6342511



1x
6058368



2x
6332629



2x
6213786



1x
6240042



1x
6146223



 
1x
6034676



1x
4211421



2x
4211045



1x
6056226



1x
6254219



2x
6209673



1x
6296485



2x
6061201



2x
6206151



1x
6172421



3x
6217794



2x
6268863



1x
6263792



 
2x
6133062



2x
6122543



1x
6296493

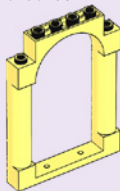

1x
6249064



1x
6332647



1x
6332642



1x
6334786



2x
6162580



4x
4529247



1x
6330618



1x
6173109



1x
6038163



1x
6075079



1x
6107194



4x
6207933



1x
6009771



2x
6172437



2x
4536675



1x
6270116



2x
6312473



1x
6278548

Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



00800 5346 5555 :



1-800-422-5346 :

